You will be responsible for internet charges to download this guide

すみっコぐらし™

For 6+ years

© TOMY

TAKARA TOMY®

すみっコガチャ

sumikko gacha

Guide Book

Gacha Gacha

150 Types Sumikko & Minikko

Turn the handle to play with Sumikkos!

Set Contents

Sumikko Gacha x1
User Manual x1

LCD Display	1.44 inch TFT LCD
Resolution	LCD Display 128 x 128
Continuous Use Time	Approximately 6 hours with fresh batteries

Requires 3 AAA batteries (not included).
Pictures are for illustration purposes only.
Actual product may differ.
The LCD screen shown is a simulated image.

©2025 San-X Co., Ltd. All Rights Reserved.

くちにいれない

⚠ Warning

Parents, please read

This device contains small parts. Not suitable for children under the age of 3 as it may pose a choking hazard.

⚠ Caution

Please read the instruction manual carefully before use. Avoid using it for long periods without a break. Do not use it in dark places. Using batteries incorrectly may cause overheating, explosion, or leakage. Please observe the following: •Do not use rechargeable batteries (secondary batteries). •Do not use old and new batteries, or different types of batteries, together. •Insert the + and - ends correctly. •Remove the batteries if you won't use it for a long time. •Do not charge, disassemble, heat, or throw the batteries into fire. •If battery fluid gets in your eyes, rinse with clean water and consult a doctor immediately. •If it gets on your skin or clothes, wash with water. •Follow your local regulations when disposing of used batteries. •Be careful not to get your fingers or hair caught in the gaps of handles or rotating parts. •To prevent accidents, store out of reach of children under 3 years old after use. •Do not put plastic bags over your head or cover your face with them.

Please read this manual carefully before using the product, and keep it in a safe place after reading. Keep the packaging for storage and don't throw it away carelessly. Don't drop or hit the product. Don't try to disassemble, modify, or repair it yourself, as that may cause it to break. The product is not waterproof, so don't get it wet or put water or anything strange inside. Don't leave it in hot, humid, dusty, or cold places like inside a car under the sun or near heaters. Avoid using or storing it near fire or heat. Any lost data is not guaranteed or covered. To clean it, use a soft cloth and avoid using thinner, benzine, or alcohol. This product doesn't guarantee future results. If you're not going to use it for a while, take the batteries out. The time might be off by about ±10 seconds per day.

❶ Parts & Operation

Front

Back

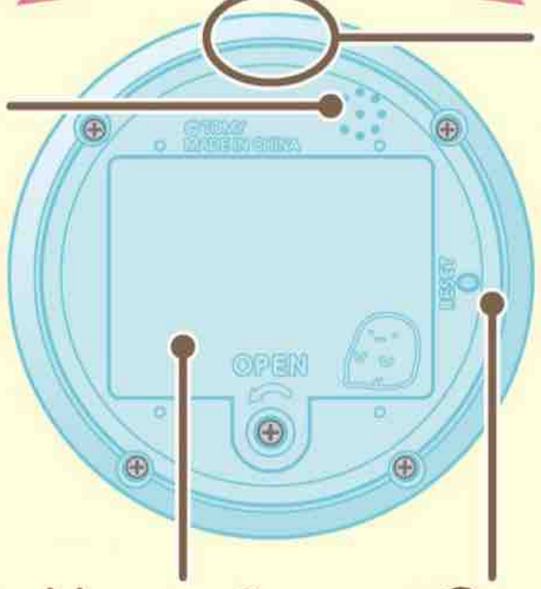

Select Button

Press to select a different item. Long press to speed up.

Confirm Button

Press to confirm selection

Cancel Button

Press Cancel Button to go back 1 step before.

Handle

Can be turned left and right. Sometimes has similar function as Select Button

Power On/Off

Press the Confirm Button for 1 second to power on, and 3 seconds to power off. After 1 minute of inactivity it will power off by itself.

Reset

After inserting fresh batteries, use a thin stick to lightly press the Reset Button.

Even if Reset Button is pressed, your game data will be preserved. You will be required to enter the time and date again.

❷ Before Playing

Inserting Batteries

❶ Open the battery cover on the back of the device.
(Use a + head screwdriver)
❷ Insert 3 AAA batteries (sold separately).
Confirm the + and - terminals are correct.
❸ Put the battery cover back and screw it back on.
❹ Press the Confirm Button for 1 second to power on.

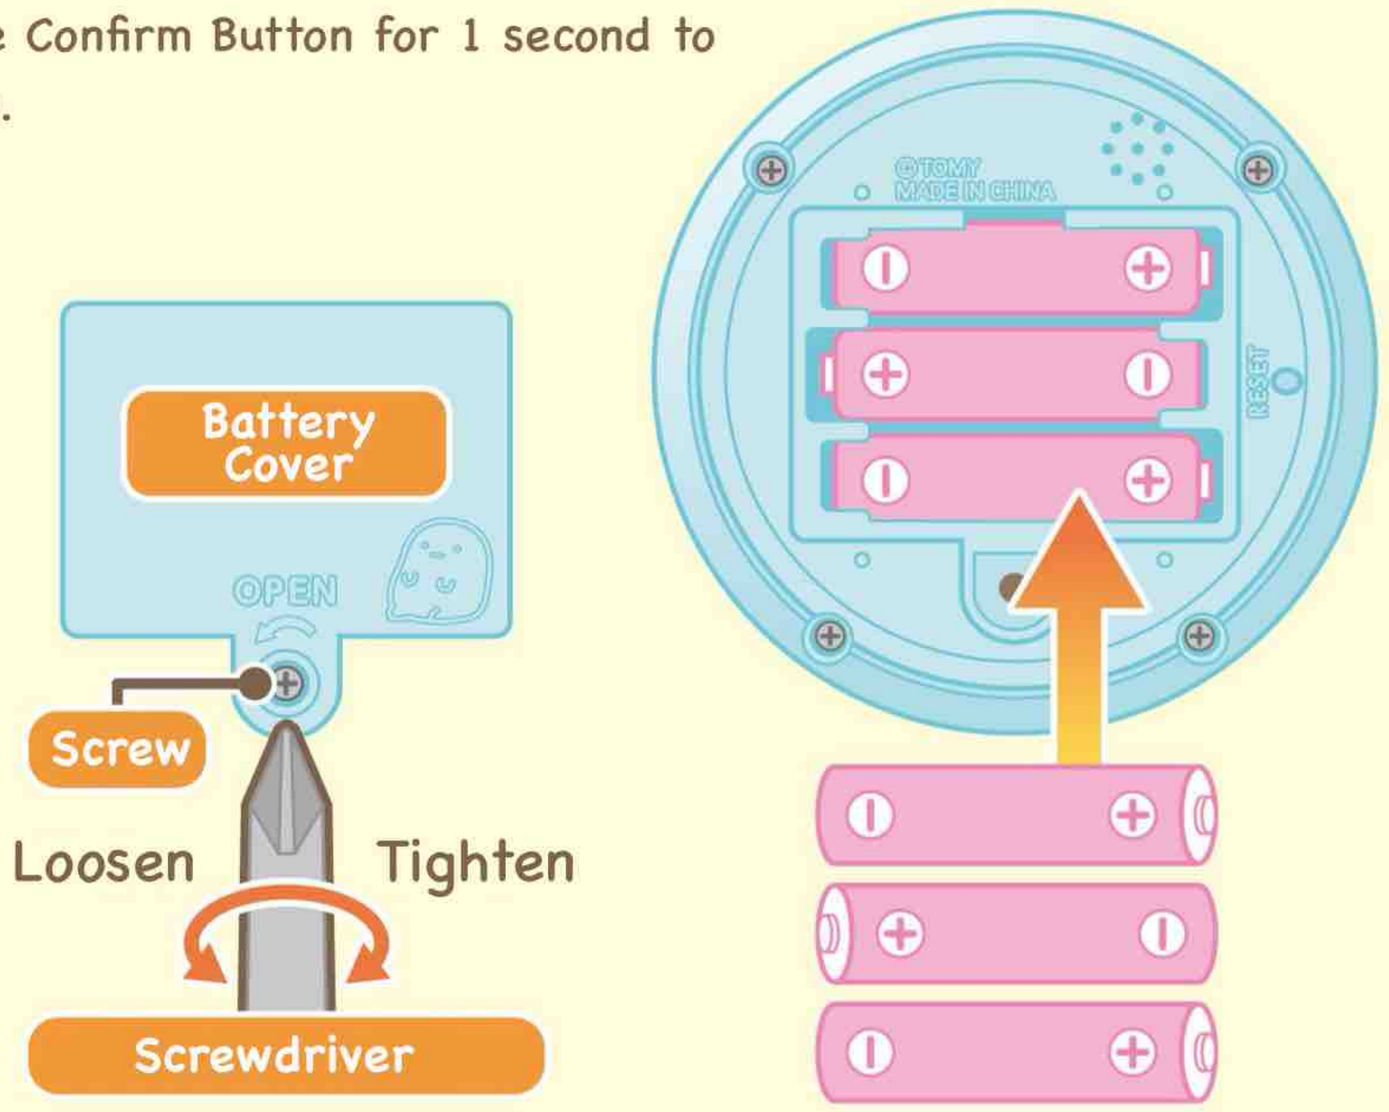

Use fresh alkaline batteries.
Get a parent or guardian to change the batteries.

Changing Batteries

When the image on the right appears, change the batteries. Also change the batteries if the volume becomes low or the screen becomes dark.
If not playing for a long time, remove the batteries.
After changing batteries, press the Reset Button.

When putting in a bag and carrying it around, make sure the buttons are not accidentally pressed.
If the buttons are constantly pressed, the battery will deplete.
After changing the batteries, the time and date must be set again. The game play data will not be deleted.

❸ Initial Settings

Set the date

❶ Use Select Button to set the year, then press Confirm Button to confirm it. Do the same for month and day.

Set the time

❷ Next, set the time. Use the Select Button to set the hour, then press Confirm Button to cont. Do the same for minute.

Set birthday

❸ Lastly, set your birthday. On your birthday, something special will happen.

Press Cancel Button to go back 1 step

❹ Let's Play!

Standby Screen

Date is displayed.

Time is displayed.

Confirm Button
Go to Main Menu!

Select Button
Go to Sumikko Rooms!

Sumikko will ask for food, bath, or pets!

Cancel Button cannot be used on Standby Screen

These may happen on the standby screen!

Minikkos might come to play in Sumikkos' rooms!

Sumikko sleeps from 20:00 to 5:59.

Large dust...?
➜ (Chapter 6: Sumikko Rooms - Cleaning)

Sumikko is gone...!?
➜ (Chapter 6: Sumikko Rooms - Friendship & Satiety)

5 Main Menu

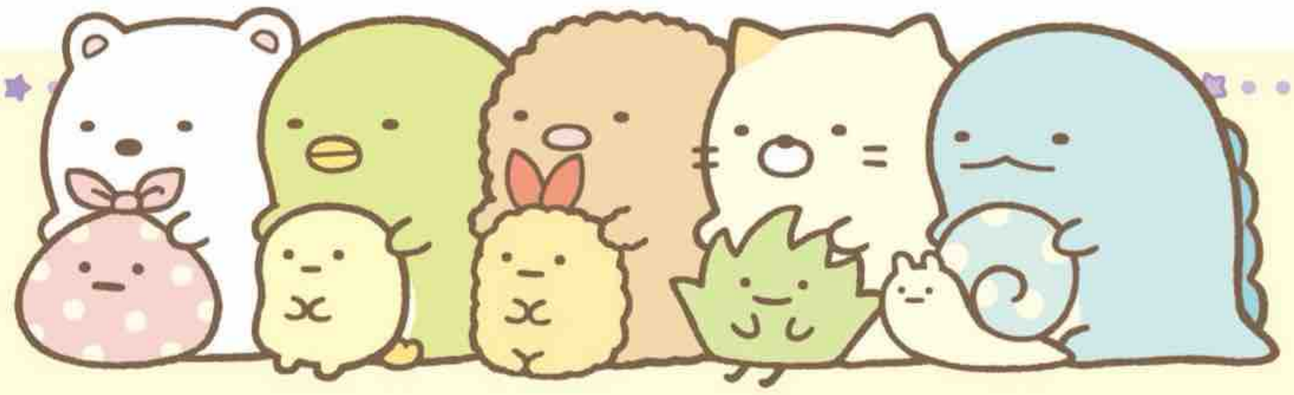

From the Standby Screen, press Confirm Button to enter the Main Menu. From Main Menu, if you press Cancel Button you will return to Standby Screen.

Sumikko Map

Sumikko Store

Go shoppingor do cooking here!

Arcade

Play 6 types of games!

Gacha

Use Sumikko Coins or Special Coins to Gacha

Sumikko Search

Use traps to search for Sumikkos.

Library

Check Sumikko's items here.

Sumikko Rooms

Care for Sumikkos here.

Settings

Basic settings are here.

6 Sumikko Rooms

From the Main Menu, select Sumikko Rooms to visit each of the Sumikkos' Rooms!

After selecting Sumikko Rooms, if you turn the handle, many capsules will fall from above!

Shirokuma's room

Penguin?'s room

Tonkatsu's Room

Neko's room

Tokage's room

6 options in care menu!

Friendship & Satiety

When caring for Sumikkos, friendship will increase!

If you don't care for Sumikkos for a long time, they will become lonely and friendship will decrease. If satiety decreases, feed it some food.

If you don't care for Sumikkos, they will leave.

Select Search (the icon that says さがしにいく)

to search for the Sumikko that has left. Use the claw to catch them and bring them back!

Food

Use the Select Button to choose the food you want to feed Sumikko and press Confirm Button to feed!

Select あげる to feed the food to Sumikkos!

Depending on the type of food, Sumikko may react to it with "Like", "Normal", or "Dislike". Each Sumikko has their own likes and dislikes!

If the food is disliked or if Sumikko is full, it will not eat.

Food icons marked with [?] will have to be unlocked by obtaining the food from Gacha or from Sumikko Store.
Food can also be obtained by cooking at Sumikko Store. Refer to chapter 8: Sumikko Store - Cooking.
Only rice ball is infinite, all other foods will decrease by 1 after feeding.
You can hold maximum of 99 for each food!

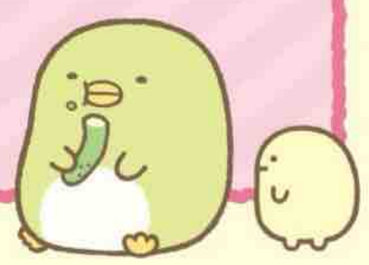

Cleaning

Let's keep the room clean!

Turn the handle to clean the room!

If you don't clean the room, dust will appear. After a long time, a huge dust will form!?

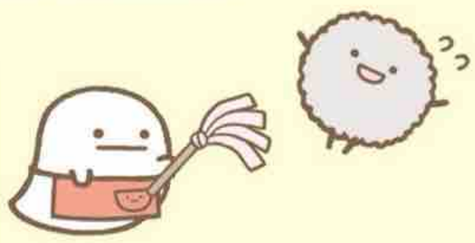

If you don't clean the room for a long time, Sumikko is blocked from view!

Bath

Turn the handle to make Sumikko go in the bath and wash them!

After a while, Sumikkos will get dirty.

Pet

Turn the handle to make the arm appear and pet Sumikko!

Friendship will increase.

Remodel

You can put furniture and change the wallpaper of Sumikkos' rooms!

Furniture can be obtained from Sumikko DIY or from Gacha. Wallpapers can be obtained as friendship increases.

➡ Check Chapter 6: Sumikko Rooms - Sumikko DIY!
➡ Check Chapter 10: Gacha

If these furniture are displayed, Sumikko may have special gestures...!?

Shirokuma	Penguin?	Tonkatsu	Neko	Tokage
Easel	Small bookshelf	Dining table	Cardboard box	Small dresser
Basket of yarn	Cabinet	Cash register	Cake stand	Treasure chest

Various events may happen in Sumikko Rooms!!

Help Sumikkos in need and receive coins!

You might receive presents...

Dining out with everyone...

All Sumikkos may gather in 1 room!

DIY

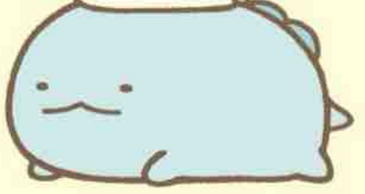

Finding Ingredients

Collect ingredients required to make furniture!

Different furniture require different materials/ ingredients. Collect a lot to craft various furniture!

8 Types of Ingredients

- Yellow Flower
- Red Flower
- Wood
- Grass
- Blue Flower
- Cotton
- Metal
- Clay

How to move Sumikko

Obtained material is displayed here

Time remaining

Handle

Turn the handle left and right to move Sumikko in that direction.

Confirm Button

Press this button to jump to collect items or avoid holes.

While finding ingredients, Select and Cancel buttons cannot be used.

Sumikko DIY

Use the collected ingredients to make furniture!

Use the handle and buttons as shown to make furniture! After making furniture you can also get Sumikko In! If the crafting is incorrect you'll fail.

If failed, ingredients will not be consumed.

Furniture name

Required ingredients

みどり Press Select Button

ピンク Press Confirm Button

Turn handle right

Turn handle left

Ingredients

Check the amount of ingredients you have!

Success!

The furniture that you crafted can be placed in Sumikko's rooms.

Failure...

No furniture is created.

7 Sumikko Search

Find Sumikkos using traps! Pick the trap you want to use.

Traps will be reduced by 1 everytime it is being used, except for Hole and Rice Ball, which can be used indefinitely. You can hold a maximum of 99 of each type of trap. Traps with [?] symbol means you have never owned it before. Once you obtain the trap for the first time via Gacha or Sumikko Store, it will be unlocked! You will catch different types of Sumikko depending on the type of trap used.

Turn the handle to use the trap! If you are successful, you will obtain a Sumikko!

Success!

Once a Sumikko is caught, it will be recorded in the Sumikko Collection book at the Library!

Failure...

If you don't time it right, Sumikko will escape your trap!

Food Type Trap

Before Sumikko finishes eating, catch it with the claw! If it finishes eating it runs away.

Placement Type Trap

Set the trap using the claw! When Sumikko comes along, catch it with the claw before it runs away!

Eh...?

Sometimes even without using traps, you can meet Sumikko! Use the claw to catch the Sumikko in the bushes!

8 Sumikko Store

Buying Food & Traps

Using SumiCoins, you can buy Food to feed Sumikkos in their rooms or Traps to search for Sumikkos.

1 Choose whether you want to buy Food or Traps.

2 Food or Traps marked with [?] will be unlocked after obtaining them. Choose the item you want to buy.

3 Choose the number of items you want to buy.

If the number of item available for purchase is only 1, you cannot select more than 1.

Cooking

Choose 2 ingredients to cook!

The dish you cook will depend on the ingredients you pick, so try different combinations!

Pick the ingredients and buy them.

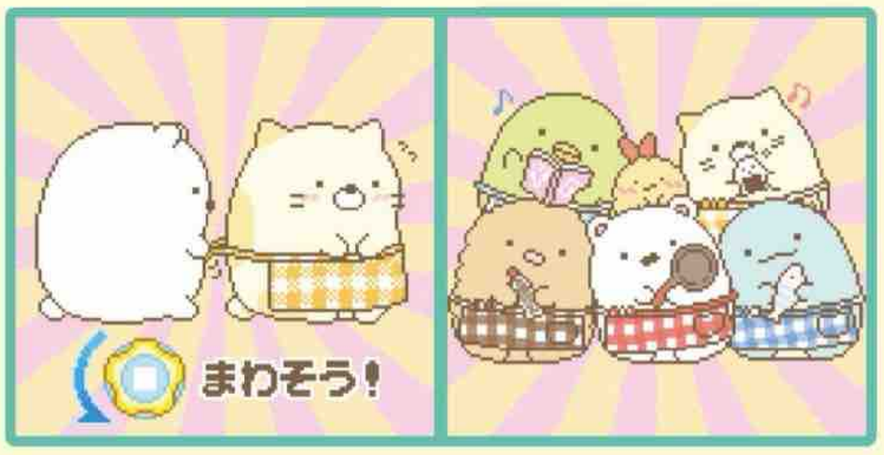

Turn the handle left and right to cook!

The cooked food can be fed to Sumikkos in their rooms.

9 Arcade

Play games and earn SumiCoins! Make a lot of SumiCoins and use them for Gacha and shopping at Sumikko Store.

Shirokuma's Go-Kart

Turn the handle to drive the go-kart. Avoid the mountain, ghost, hole, and claw, while getting the stars.

Tokage's Fishing

Firstly, turn the handle slowly to lure the fish. When you get a bite, turn the handle quickly to catch the fish!

Penguin?'s Live

Hit the Select Button and Confirm Button, or turn the Handle in time with the icons!

Neko's Sushi Shop

When the sushi reaches the middle, hit the Confirm Button to eat the sushi! You will lose some time if you eat wasabi!

Tonkatsu's Bath

Turn the Handle to move Tonkatsu up and down, while keeping the temperature at the heart icon.

Sumikko Fortune

Draw a card to see today's fortune!

10 Gacha

Collect various coins and play Gacha!

1 Gacha spin costs 100 SumiCoins. You can win Sumikkos, Food, Traps, Furniture, or Travel Tickets!

Spend 300 SumiCoins to buy 3 spins in 1 go!

Spend 1 Blue Coin to play 1 spin.

Use the Travel Coin to play a Special Gacha Machine. You can win Travel Tickets!

When you travel, Sumikko's friendship level can increase!

Use the Silver Coin to play a Special Gacha Machine. You can win rare Food, Traps, or Furniture that cannot be bought at Sumikko Store!

Use the Gold Coin to play a Special Gacha Machine. You can get a special Sumikko or Travel Ticket!

11 Library

Newly obtained items will be marked with a star or with [NEW]

Sumikko Collection

You can view all the Sumikkos that you have found so far! Choose the type of Sumikko, and see all the Sumikkos of that type that you have gotten! If you have collected all the Sumikkos of that time, it will be marked with a crown.

Trap Book

1. You can read about the details of each Trap that you have gotten before.

2. If the description is longer, you can scroll down to the next page by pressing the Confirm Button.

Food Book

You can read about the details of each Food that you have gotten before.

Furniture Book

You can read about the Furniture that you have gotten before.

⑫ Settings

In Settings, you can set the date, time alarm, birthday, brightness, and volume. You can also enter passwords and erase the game data.

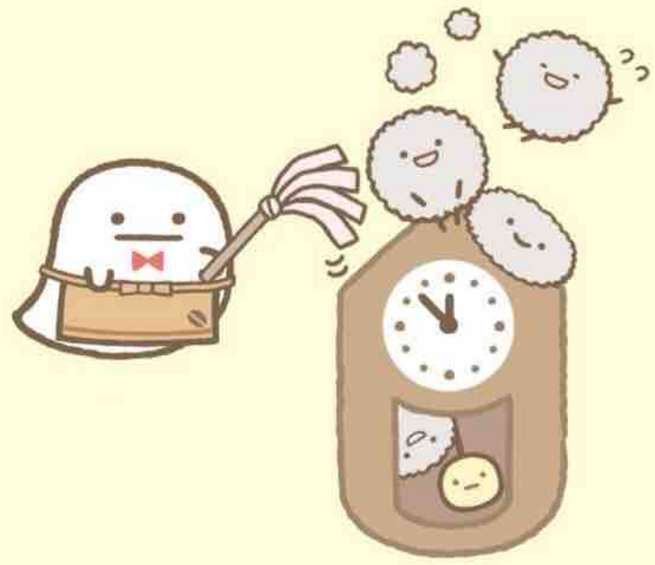

Date Settings

You can set the date here.

Time Settings

You can set the time here.

Alarm

You can set the alarm. To turn the alarm off, turn the Handle.

If you are playing with the device at the time that the alarm is set, the alarm wont ring. The alarm won't ring after changing batteries.

Birthday

On your birthday that you set, Sumikkos will hold a celebration!

Brightness

There are 5 screen brightness levels that you can set. 3 is the default.

Volume

There are 5 volume levels that you can set. 3 is the default. 0 is mute.

Password

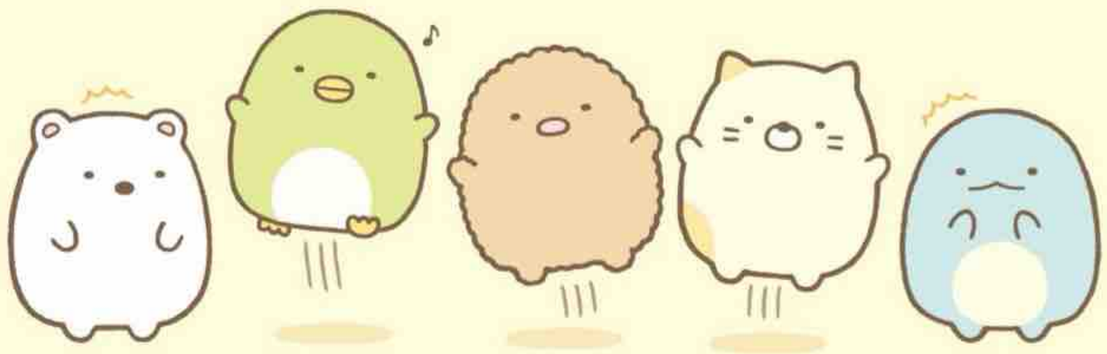

Enter passwords to get coins! Passwords can be found in magazines and the Tamara Tomy website. Remember to check the website regularly!

Try using this password!

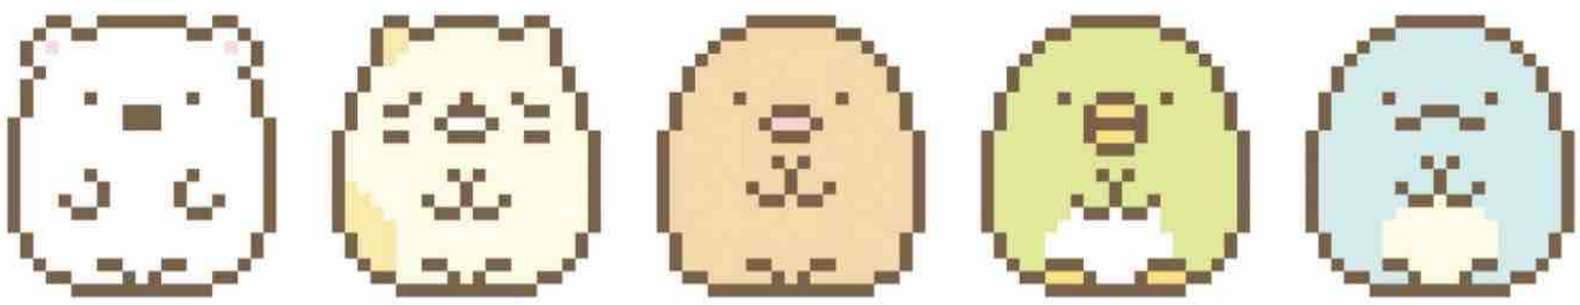

There are 2 more passwords that can be found on the box packaging that your device came in!

All Reset

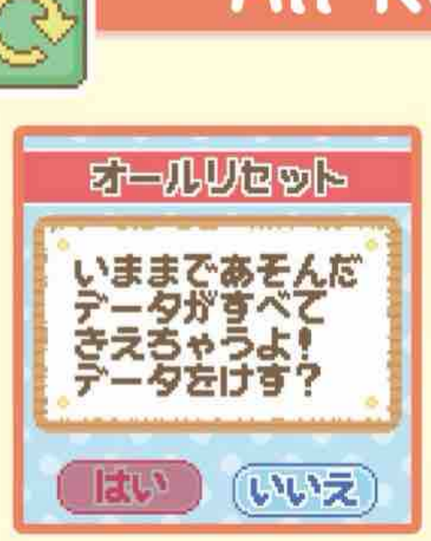

All your gameplay data will be erased. Select はい two times and all data will be erased.

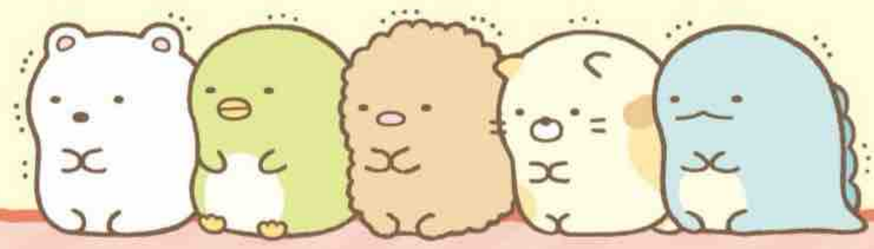

Erased data will be gone forever! Only reset data if necessary.

13 In these situations...

● Cannot turn on	Even if the "Change Battery" screen doesn't appear, you might need to change the batteries! Refer to Chapter 2 of this guide on how to change batteries. Always use fresh alkaline batteries, and don't mix different types of batteries.
● Screen doesn't turn on or looks weird	Press the Confirm Button for 3 seconds or longer. If that doesn't fix the problem, press the Reset Button.